

System Requirements

- 1GHz or higher CPU
- 1GB or more RAM
- Hard disk with 2GB or more spare space
- USB 2.0/3.0

The software supports the following operating systems:


Microsoft Windows not lower than Vista

Installation

1. Insert the installation CD into the CD-ROM of a computer.
2. The installation interface pops up. (If no installation interface appears, double-click Setup.exe in the CD-ROM directory to start it manually.)

Using the Software

1. Interface

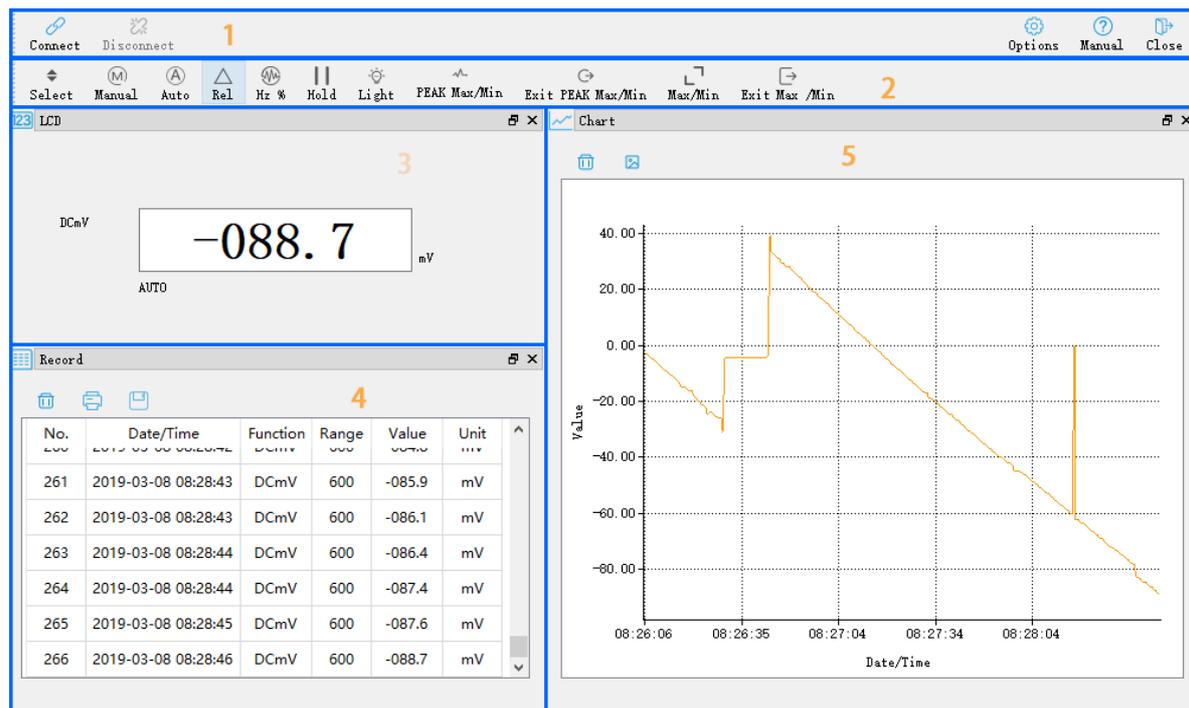

Area	Description
1	Toolbar
2	Control commands
3	Real-time measurement
4	Data records
5	Data chart

2. Connect device

- Click  to connect the device.
- If the connection is successful, the measurement data will be displayed in Area3, Area4 and Area 5.

3. Disconnect device

- Click  to disconnect the device.
- Each area will stop displaying measurement data

4. Export


- Click  to export the data record to an Excel file

5. Clear data

- Click  to clear the recorded data.

6. Setup software

- Click  to open options dialog

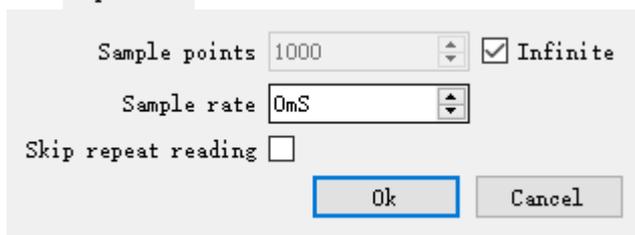

The image shows a dialog box titled "Options" with the following fields and controls:

- "Sample points": A numeric input field containing "1000" and a checked checkbox labeled "Infinite".
- "Sample rate": A dropdown menu showing "0mS".
- "Skip repeat reading": An unchecked checkbox.
- "Ok" and "Cancel" buttons at the bottom.

- "Sample Points": Set the number of sampling points. If "Infinite" is checked, the number is unlimited
- "Sample rate": Set the sampling rate. If the set rate is greater than the actual rate, the actual rate will prevail; if set to 0, the actual rate will be sampled
- "Skip repeat reading": If checked, the same sample value as the previous one is not recorded

7. Get help

- Click  to open the "Software user manual"

8. Close the software

- Click  to close the software